

DS-2XS2T41G0-ID/4G/C04S05 4 MP Solar-powered Security Camera Setup



- Detects human body through passive infrared which is sensitive to body temperature (PIR)
- Standalone with built-in solar panel and battery
- High quality imaging with 4 MP resolution
- Efficient H.265+ compression technology
- Provide real-time security via built-in two-way audio
- Water and dust resistant (IP66)
- Support remote control with Hik-Connect APP



▪ Specification

Camera	
Image Sensor	1/3" Progressive Scan CMOS
Min. Illumination	Color: 0.01 Lux @ (F1.6, AGC ON), B/W: 0 Lux with IR
Shutter Speed	1/3 s to 1/100,000 s
Wide Dynamic Range	120 dB
Day & Night	IR cut filter
Lens	
Lens Type	Fixed focal lens, 4 and 6 mm optional
Iris Type	Fixed
Aperture	F1.6
Lens Type & FOV	4 mm, horizontal FOV 83.7°, vertical FOV 44°, diagonal FOV 99.5° 6 mm, horizontal FOV 51.8°, vertical FOV 27.9°, diagonal FOV 60.5°
Lens Mount	M12
Illuminator	
IR Range	Full consumption mode: up to 30 m Low power mode: up to 10 m
Wavelength	850 nm
Smart Supplement Light	Yes
Video	
Max. Resolution	2688 × 1520
Main Stream	50 Hz: 12.5 fps (2688 × 1520, 1920 × 1080, 1280 × 720) 60 Hz: 15 fps (2688 × 1520, 1920 × 1080, 1280 × 720)
Sub Stream	50 Hz: 12.5 fps (640 × 480, 640 × 360) 60 Hz: 15 fps (640 × 480, 640 × 360)
Video Compression	Main stream: H.265+/H.265/H.264+/ H.264 Sub-stream: H.265/H.264/MJPEG
Video Bit Rate	32 Kbps to 8 Mbps
H.264 Type	Baseline Profile/Main Profile/High Profile
H.265 Type	Main Profile
H.264+	Full consumption mode: main stream supports
H.265+	Full consumption mode: main stream supports
Bit Rate Control	CBR/VBR
Region of Interest (ROI)	1 fixed region for main stream
Audio	
Audio Sampling Rate	8 kHz/16 kHz/32 kHz/44.1 kHz/48 kHz
Environment Noise Filtering	Yes
Audio Compression	G.711/G.722.1/G.726/MP2L2/PCM/AAC/MP3
Audio Bit Rate	64 Kbps (G.711ulaw/G.711alaw)/16 Kbps (G.722.1)/16 Kbps (G.726)/32 to 192 Kbps (MP2L2)/8 to 320 Kbps (MP3)/16 to 64 Kbps (AAC)
Network	
Simultaneous Live View	Up to 6 channels
API	EZVIZ


Protocols	TCP/IP, ICMP, HTTP, FTP, DHCP, DNS, DDNS, RTP, RTSP, RTCP, NTP, UPnP, SMTP, IGMP, QoS, IPv6, UDP, Bonjour, SSL/TLS
User/Host	Up to 32 users. 3 user levels: administrator, operator and user
Network Storage	Auto network replenishment (ANR)
Client	iVMS-4200, Hik-Connect, Hik-Central Power consumption mode: Hik-Connect
Web Browser	Plug-in required live view: IE 10+ Plug-in free live view: Chrome 57.0+, Firefox 52.0+ Local service: Chrome 57.0+, Firefox 52.0+
Mobile Communication	
4G Frequency	LTE-TDD: Band 38/40/41; LTE-FDD: Band 1/3/5/7/8/20/28; WCDMA: Band 1/5/8; GSM: band 3/5/8
4G Standard	LTE-TDD, LTE-FDD, WCDMA, GSM
Image	
Day/Night Switch	Day, Night, Auto, Schedule
Image Enhancement	BLC, HLC, 3D DNR, Defog, EIS, Distortion correction
Image Settings	Rotate mode, saturation, brightness, contrast, sharpness, gain, white balance adjustable by client software or web browser
PIR	
PIR Range	Up to 10 m
Interface	
Ethernet Interface	1 RJ45 10 M/100 M self-adaptive Ethernet port
On-Board Storage	Built-in memory card slot, support microSD/SDHC/SDXC/TF card, up to 256 GB Built-in 8 GB eMMC storage (6 GB available for recording)
Built-in Microphone	Yes
Built-in Speaker	Yes
Hardware Reset	Yes
Event	
Basic Event	PIR, exception
General	
Linkage Method	Upload to memory card, notify surveillance center, audible warning, trigger recording, trigger capture, send email
Firmware Version	V5.5.120
General Function	Anti-flicker, heartbeat, mirror, privacy mask, flash log, password reset via email, pixel counter
Software Reset	Yes
Startup and Operating Conditions	0 °C to 40 °C (32 °F to 104 °F), humidity 95% or less (non-condensing)
Power Supply	5 VDC ± 10%, reverse polarity protection
Power Consumption and Current	Typical power scenarios: 1.85 W (4G working) Standby scenarios: 40 mW Max. power consumption: 4.8 W

Power Interface	Power supply interface: microUSB Extended solar panel: Ø3.5 mm, 5 VDC
Camera Dimension	245.8 mm × 156 mm × 214 mm (9.7" × 6.1" × 8.4")
Package Dimension	730 mm × 722 mm × 285 mm (28.7" × 28.4" × 11.2")
Camera Weight	4G model: approx. 1235 g (2.7 lb.)
With Package Weight	4G model: approx. 1890 g (4.2 lb.)
PV Panel	Dimension: 205.1 mm × 145.1 mm × 2.35 mm (8.1" × 5.7" × 0.1") Standard output consumption: 5 W Standard testing condition: AM = 1.5, 25 °C (77 °F), 1000 W/m², SMQ + 12%
Battery	
Battery Type	Ternary lithium
Capacity	10 Ah
Max. Charging Voltage	4.25 V
Operating Temperature	0 °C to 50 °C (32 °F to 122 °F)
Battery Voltage	3.0 V to 4.2 V
Cycle Lifetime	Low consumption real-time mode: 1 day (at the rate of one-hour alarm and half-hour remote live view per day) Wakeup Mode: 7 days (at the rate of 1.67-hour remote live view per day)
Battery Life	More than 500 cycles
Battery Weight	Approx. 4.5 kg (9.9 lb.)
Charging Condition	0 °C to 50 °C (32 °F to 122 °F) (deviation: ± 5 °C)
Discharging Condition	-20 °C to 60 °C (-4 °F to 140 °F) (deviation: ± 5 °C)
Approval	
Class	Class B
Protection	IP66 (IEC 60529-2013)

▪ Available Model

DS-2XS2T41G0-ID/4G/C04S05 (4/6 mm)

▪ Dimension

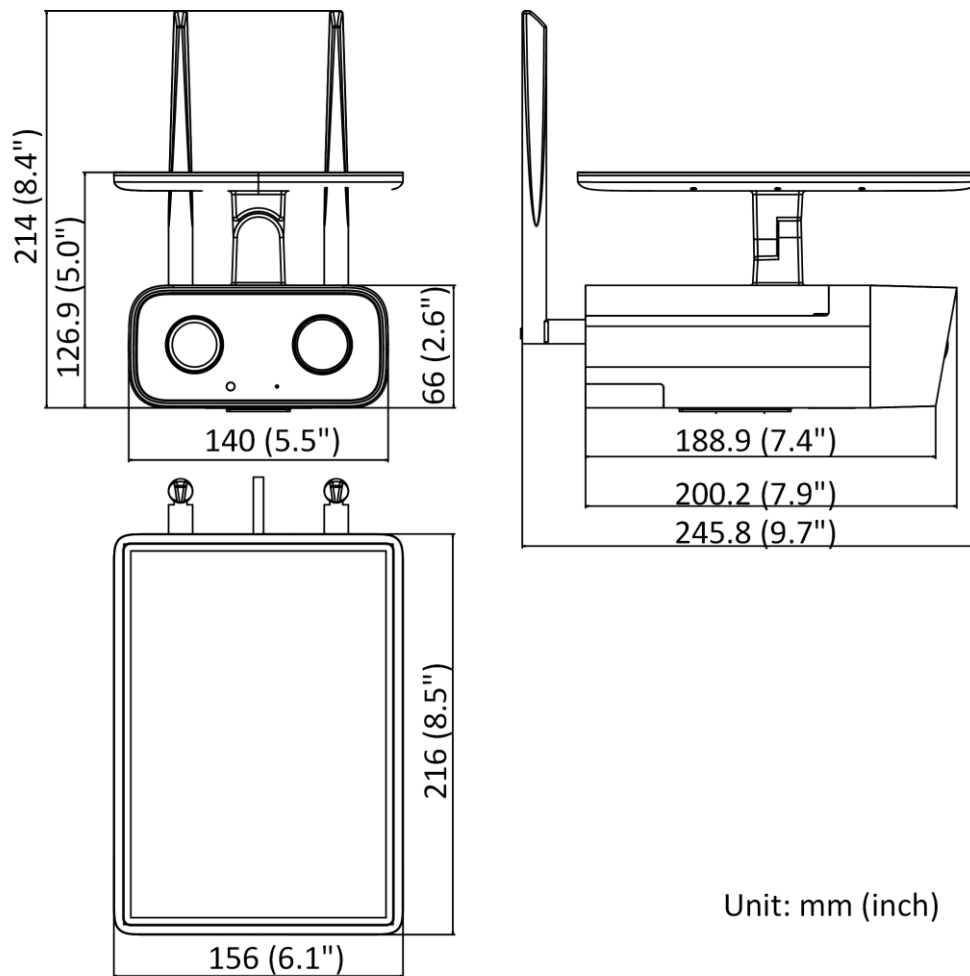

Unit: mm (inch)

▪ Accessory

▪ Included

DS-1292ZJ

Wall Mount



▪ Optional

DS-1275ZJ

Vertical Pole Mount



Distributed by



HIKVISION®

Headquarters

No.555 Qianmo Road, Binjiang District,
Hangzhou 310051, China
T +86-571-8807-5998
overseasbusiness@hikvision.com

Hikvision USA
T +1-909-895-0400
sales.usa@hikvision.com

Hikvision Australia
T +61-2-8599-4233
salesau@hikvision.com

Hikvision India
T +91-22-28469900
sales@pramahirvision.com

Hikvision Canada
T +1-866-200-6690
sales.canada@hikvision.com

Hikvision Thailand
T +662-275-9949
sales.thailand@hikvision.com

Hikvision Europe
T +31-23-5542770
sales.eu@hikvision.com

Hikvision Italy
T +39-0438-6902
info.it@hikvision.com

Hikvision Brazil
T +55 11 3318-0050
Latam.support@hikvision.com

Hikvision Turkey
T +90 (216)521 7070- 7074
sales.tr@hikvision.com

Hikvision Malaysia
T +601-7652-2413
sales.my@hikvision.com

Hikvision UK & Ireland
T +01628-902140
sales.uk@hikvision.com

Hikvision South Africa
Tel: +27 (10) 0351172
sale.africa@hikvision.com

Hikvision France
T +33(0)1-85-330-450
info.fr@hikvision.com

Hikvision Kazakhstan
T +7-727-9730667
nikia.panfilov@hikvision.ru

Hikvision Vietnam
T +84-974270888
sales.vt@hikvision.com

Hikvision UAE
T +971-4-4432090
salesme@hikvision.com

Hikvision Singapore
T +65-6684-4718
sg@hikvision.com

Hikvision Spain
T +34-91-737-16-55
info.es@hikvision.com

Hikvision Tashkent
T +99-87-1238-9438
uzb@hikvision.ru

Hikvision Hong Kong
T +852-2151-1761
info.hk@hikvision.com

Hikvision Russia
T +7-495-669-67-99
saleru@hikvision.com

Hikvision Korea
T +82-(0)31-731-8817
sales.korea@hikvision.com

Hikvision Poland
T +48-22-460-01-50
info.pl@hikvision.com

Hikvision Indonesia
T +62-21-2933759
Sales.Indonesia@hikvision.com

Hikvision Colombia
sales.colombia@hikvision.com




How to Use Hikvision's Solar Camera and Add it to Hik-Connect

Title:	How to Use Hikvision's Solar Camera and Add it to Hik-Connect	Version:	v1.0	Date:	16/03/2021
Product:	IPC			Page:	1 of 6

NOTES:

- 1) This document is based on firmware: **V5.5.120_201209**
1. Power up the camera and connect it to LAN: the power input should be 5 V and 1 A. The length of the power cord should not exceed 1 m.

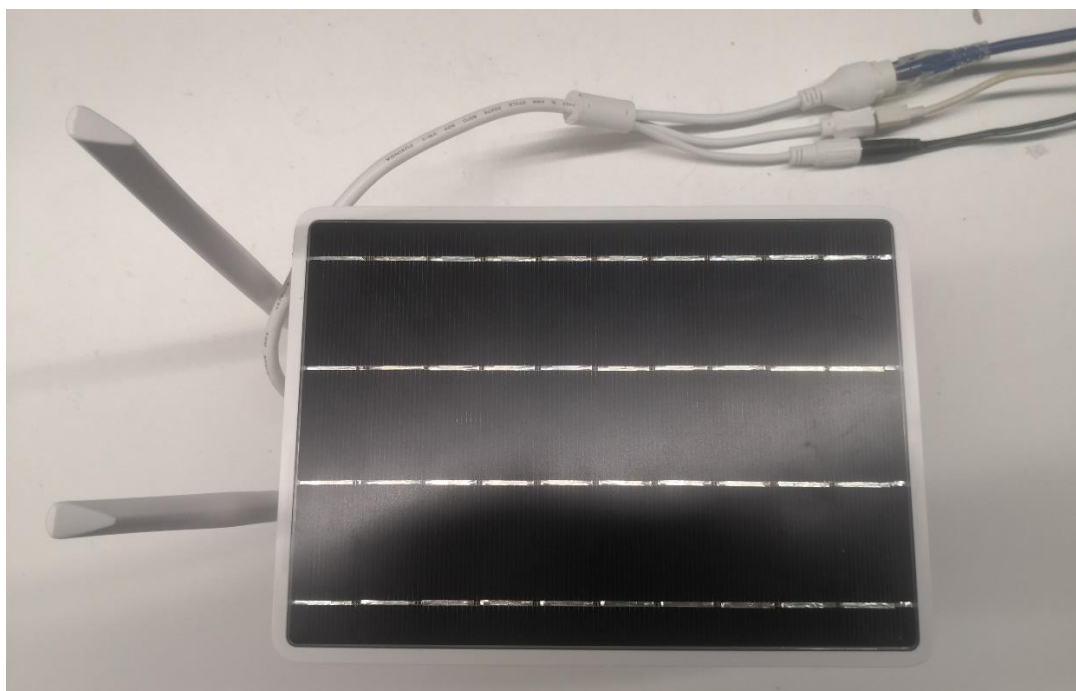

2. The indicator light is blinking red during connecting, whilst turns to blinking blue when connection is finished.



Title:	How to Use Hikvision's Solar Camera and Add it to Hik-Connect	Version:	v1.0	Date:	16/03/2021
Product:	IPC			Page:	2 of 9

Connecting

Connected

3. Activate the camera and set password on SADP.

The screenshot shows the SADP interface with a list of devices. The device with ID 038, model DS-2CV2B41G0-ID/4G, is highlighted with a red box and labeled (1) Check the box of the device. The 'Status' column shows 'Inactive'. A red arrow points to the 'Activate' button in the 'Activate the Device' window, labeled (3) Activate. Another red arrow points to the 'New Password' field in the same window, labeled (2) Set password.

ID	Device Type	Status	IPv4 Address	Port	Enhanced SDK Se...	Software V...
001	iDS-96128NXI-I16/G6(B)	Active	10.9.97.222	8001	8443	V4.22.205...
002	DS-TP50-16E	Active	10.9.97.111	8000	N/A	V5.1.1buil...
004	iDS-9016HUHI-K8/16S	Active	10.9.97.49	8000	N/A	V4.20.000...
005	iDS-9632NXI-I16/8F(B)	Active	10.9.97.240	8000	8443	V4.40.405...
006	iDS-9632NXI-I16/8F(B)	Active	10.9.97.31	8000	8443	V4.40.405...
034	iDS-7208HQHI-M2/S	Active	10.9.97.33	8000	N/A	V4.20.010...
035	iDS-7616NXI-I2/8F	Active	10.9.97.234	8000	N/A	V4.1.60buil...
038	DS-2CV2B41G0-ID/4G	Inactive	10.9.97.16	8000	8443	V5.5.120b...

4. Set dialing parameters and dialing: (Mantener presionado el botón de reinicio durante 4 s, escanear el código con hik connect para agregar)

Steps:

- (1) Select **Dial Mode** in **Configuration-Network-Basic Settings-Wireless Dial** (**Auto** is recommended):

The screenshot shows the Hikvision Configuration interface. The 'Wireless Dial' tab is selected. The 'Dial Mode' dropdown menu is open, and 'Auto' is selected, highlighted with a red box. Other settings like 'Network Mode', 'Offline Time', 'Phone', 'Access Number', 'User Name', 'Password', 'APN', 'MTU', and 'Verification Protocol' are visible.

(2) Input the APN of the SIM card:

Title:	How to Use Hikvision's Solar Camera and Add it to Hik-Connect	Version:	v1.0	Date:	16/03/2021
Product:	IPC			Page:	3 of 9


The screenshot shows the Hikvision configuration interface. The left sidebar has a menu with 'Local', 'System', and 'Network' options. Under 'Network', 'Basic Settings' is selected. The main area shows the 'Wireless Dial' configuration page. The 'Enable' checkbox is checked. The 'Wireless Dial-up Status' tab is active, showing fields for Dial Mode (Auto), Network Mode (Auto), Offline Time (3600 s), Phone, Access Number, User Name, Password, APN (CTNET), MTU (1400), and Verification Protocol (Auto). The APN field is highlighted with a red box. A red 'Save' button is at the bottom.

- (3) When there is no SIM card inserted, the **USIM Card Status** is **NOEXIST** in **Configuration-Network-Basic Settings-Wireless Dial-up Status**


The screenshot shows the Hikvision configuration interface. The left sidebar has a menu with 'Local', 'System', and 'Network' options. Under 'Network', 'Basic Settings' is selected. The main area shows the 'Wireless Dial' configuration page. The 'Enable' checkbox is checked. The 'Wireless Dial-up Status' tab is active, showing a table of status information. The 'USIM Card Status' field is highlighted with a red box and shows 'NOEXIST'. Other fields include Real-time Mode (UNKNOWN), Signal Strength (0), Wireless Dial-up Status (disconnected), IP Address (0.0.0.0), Subnet Mask (0.0.0.0), Gateway (0.0.0.0), and DNS Address (0.0.0.0). A 'Refresh' button is below the table. A red 'Save' button is at the bottom.

- (4) Insert a SIM card into the slot.

Title:	How to Use Hikvision's Solar Camera and Add it to Hik-Connect	Version:	v1.0	Date:	16/03/2021
Product:	IPC			Page:	5 of 9

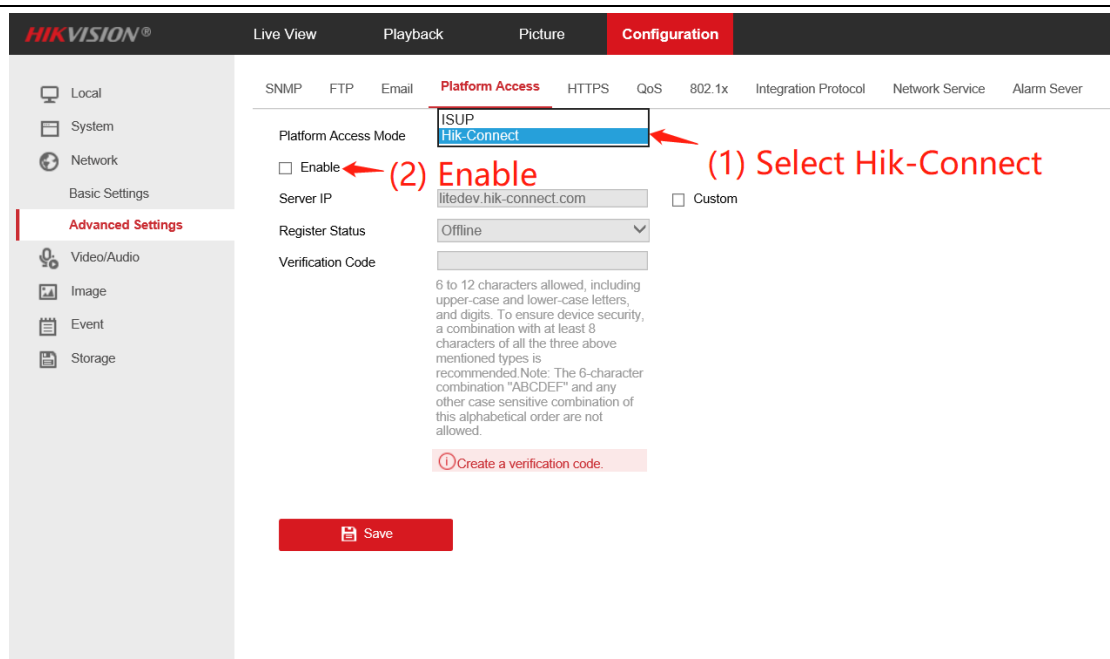


(2) Use Hik Connect APP to scan the QR code on the label of the device

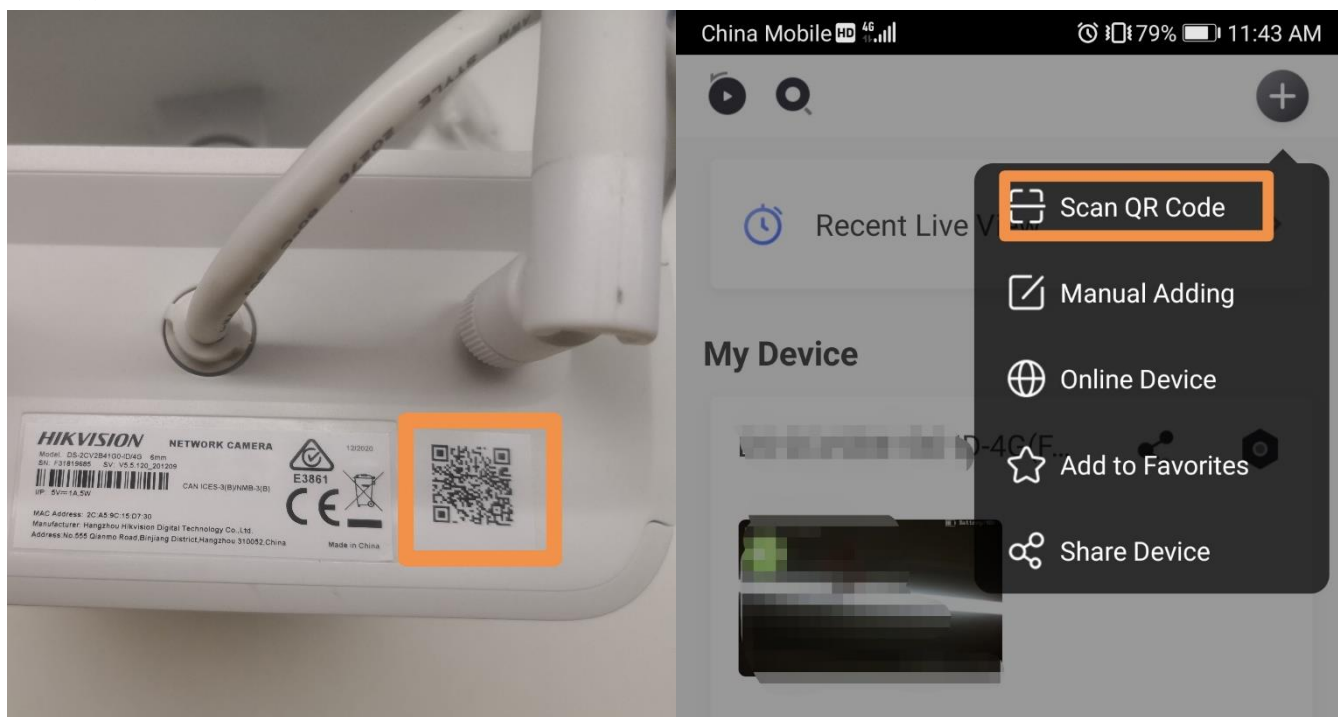

(3) Click **Next** to add the device, input the **verification code** (consistent with the verification code set on camera's web page), select device type: **Camera (Wireless) – Solar Camera**. If the indicator flashes blue slowly, click **Next** to complete adding.


Title:	How to Use Hikvision's Solar Camera and Add it to Hik-Connect	Version:	v1.0	Date:	16/03/2021
Product:	IPC			Page:	6 of 9

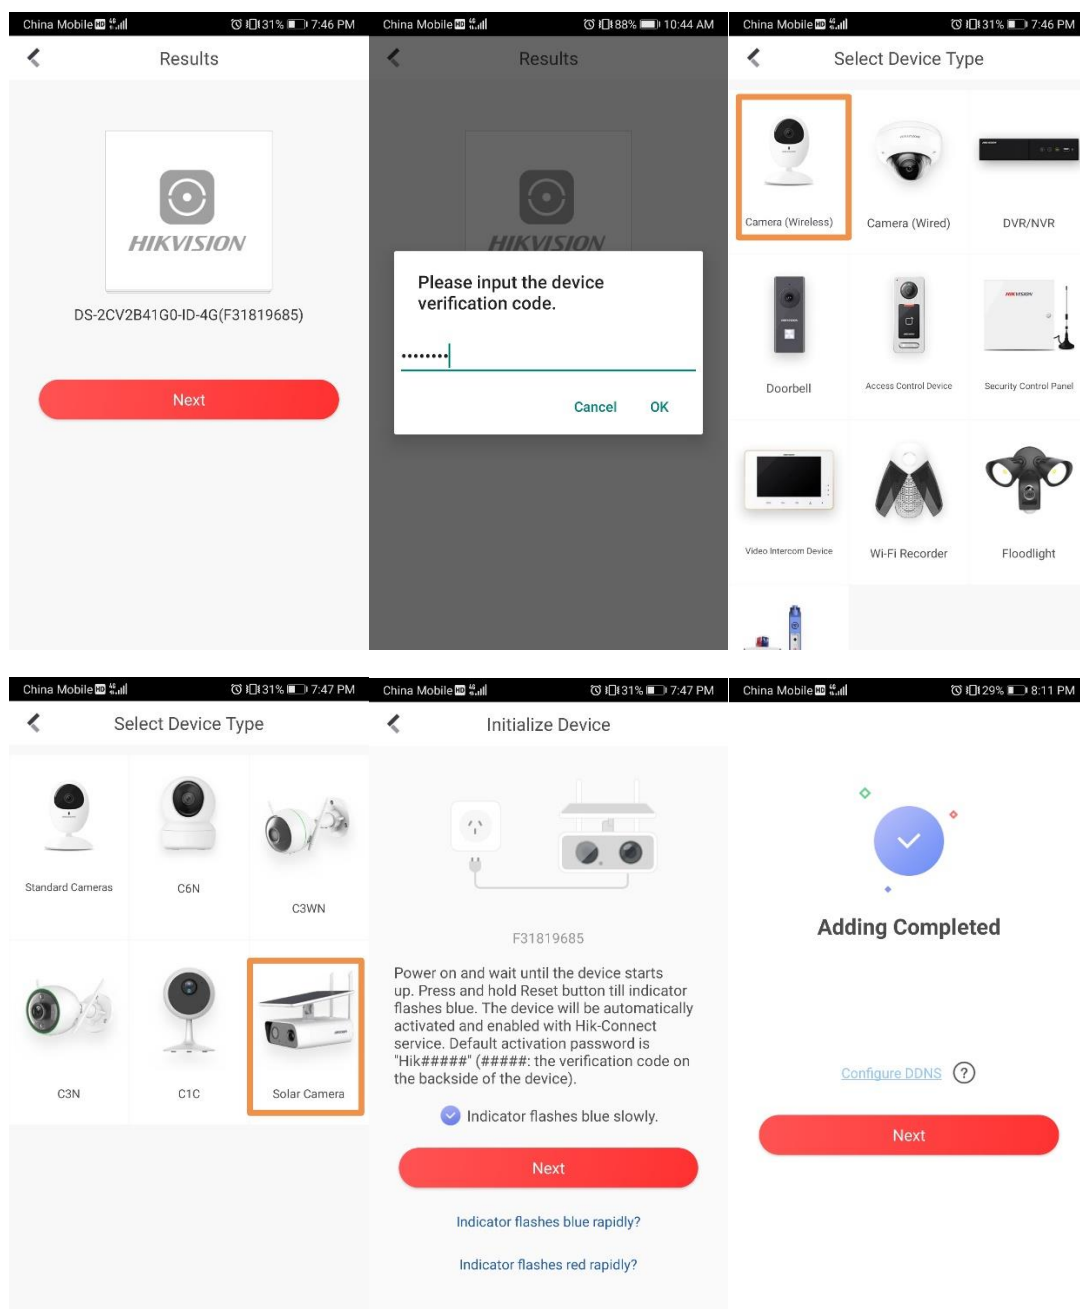


6. You can do following operations on Hik Connect APP:

- (1) Click the image to get live view of the camera. By calling the menu on the live view page, you can watch **Playback**, **Add to Favorites**, etc.

Title:	How to Use Hikvision's Solar Camera and Add it to Hik-Connect	Version:	v1.0	Date:	16/03/2021
Product:	IPC			Page:	7 of 9

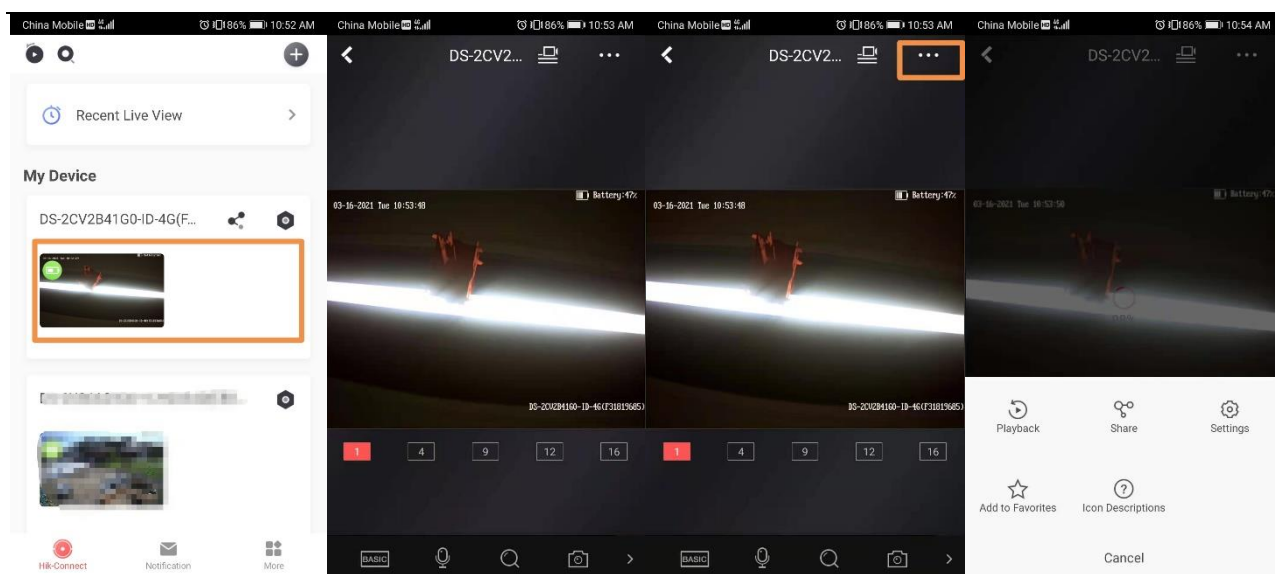

(2) Get notifications of the alarms.

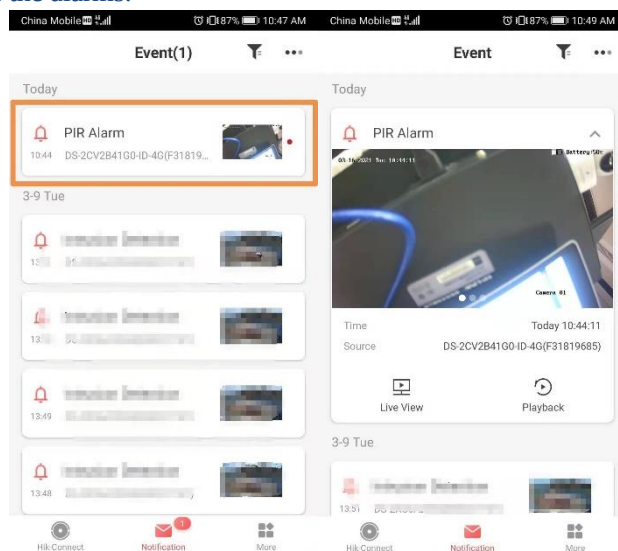

(3) Select the **Power Consumption Mode**:

- **Low Consumption Real-Time Mode (Recommended):** You can set recording schedule and capture event. After you set capture event, the Mobile Client will push a notification when capture event is detected.
- **Wakeup Mode:** The camera will be waken up only when you access it remotely or stream live video from it.

Title:	How to configure People Counting function	Version:	v1.0	Date:	16/03/2021
Product:	IPC			Page:	9 of 9

